


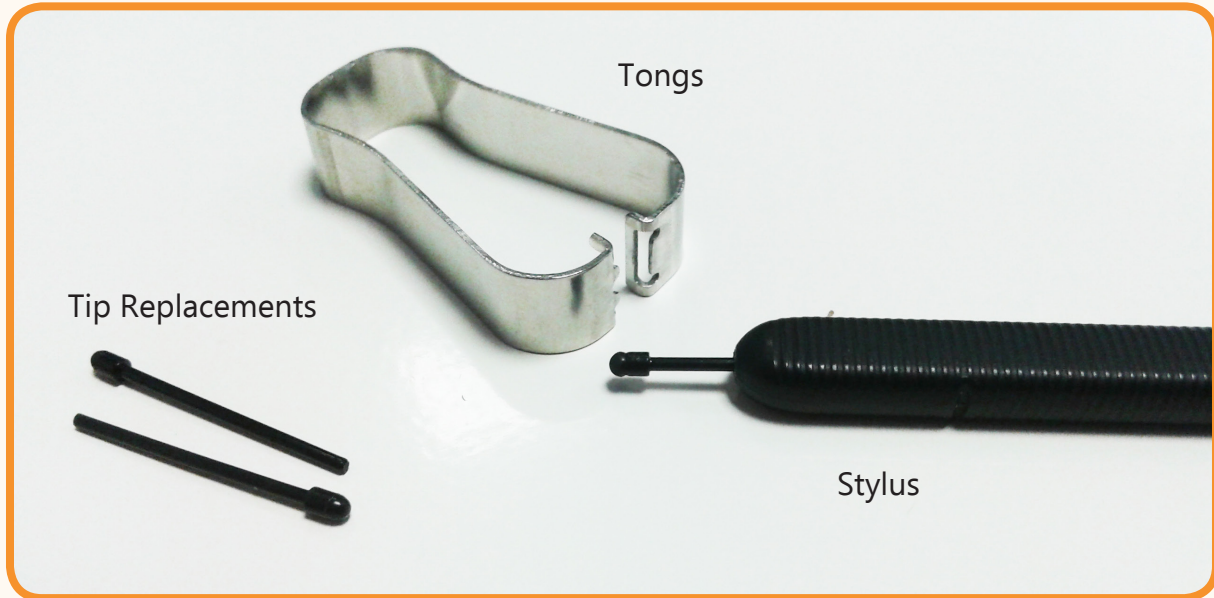

Use the tongs that came with the tablet, remove the damaged tip and replace it with the new one.



- 1) Use the tongs and firmly pinch the visible part of the stylus tip, then pull it out.
- 2) Take a tip replacement and place it in the hole (where the damaged tip was).
- 3) You can use your thumb to push the tip all the way in .
- 4) Verify that the tip is blocked in the stylus and that it does not fall out when using the stylus.