




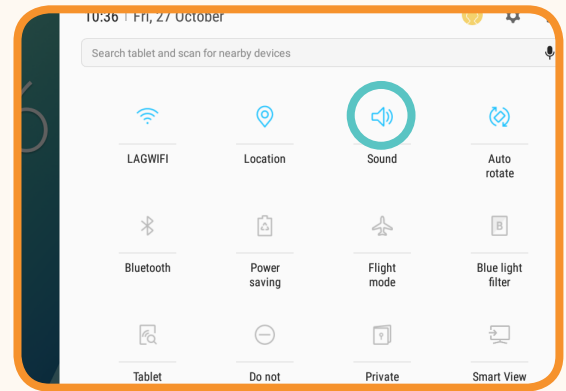

To get access to your settings, slide your finger or your stylus on your screen from top to bottom. Then click on the icon «**settings**». You can also find the icon in your settings or by holding down on the sound icon.

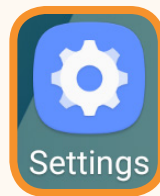

Click on the «**Sound**» you can choose (**sound mute/mute mode**). You can also choose the sound mode for the different settings on the tablet (keyboard volume, application volume, notification volume, etc).

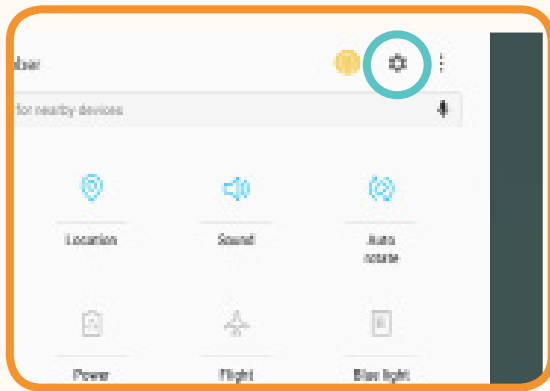